

# ***WATTNODE***<sup>®</sup>

## Advanced Pulse Output - WNB Series Installation and Operation Manual



***Continental Control Systems***

*<http://www.ccontrols.com>*

Rev 2.30

(M5)

Information in this document is subject to change without notice.

©2008 Continental Control Systems, LLC. All rights reserved.

Printed in the United States of America.

Document Number: WNB-P-2.30

Revision Date: January 16, 2008

Continental Control Systems, LLC.

3131 Indian Rd., Suite A

Boulder, CO 80301

(303) 444-7422

FAX: (303) 444-2903

E-mail: [techsupport@ccontrolsys.com](mailto:techsupport@ccontrolsys.com)

Web: <http://www.ccontrolsys.com>

WattNode is a registered trademark of Continental Control Systems, LLC.

## **FCC Information**

This device complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Class B limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

# Contents

---

<b>Overview .....</b>	<b>4</b>
WattNode .....	4
Current Transformers .....	4
Pulse Outputs .....	4
Front Label .....	5
Symbols .....	6
<b>Installation .....</b>	<b>7</b>
Precautions .....	7
Electrical Service Types .....	8
Single-Phase Two-Wire with Neutral .....	8
Single-Phase Three-Wire .....	9
Single-Phase Two-Wire without Neutral .....	10
Three-Phase Four-Wire Wye .....	11
Three-Phase Three-Wire Delta .....	12
Mounting .....	13
Selecting Current Transformers .....	14
Connecting Current Transformers .....	14
Circuit Protection .....	15
Connecting Voltage Terminals .....	15
Connecting Pulse Outputs .....	16
Output Assignments .....	17
Pull-Up Resistor Selection .....	17
Installation Summary .....	18
Installation Diagnostics .....	18
Troubleshooting .....	21
<b>Operating Instructions .....</b>	<b>23</b>
Pulse Outputs .....	23
Power and Energy Computation .....	24
Scale Factors - Bidirectional Outputs .....	24
Scale Factors - Per-Phase Outputs .....	25
Scale Factor Equations .....	25
Power and Energy Equations .....	26
Maintenance and Repair .....	28
Specifications .....	28
Models .....	28
Current Transformers .....	29
Measurement .....	30
Accuracy .....	30
Pulse Outputs .....	31
Electrical .....	32
Certifications .....	33
Environmental .....	33
Mechanical .....	34
<b>Warranty .....</b>	<b>34</b>

# Overview

---

## WattNode

Congratulations on your purchase of the Advanced Pulse Output WattNode<sup>®</sup> watt/watt-hour transducer. The WattNode offers precision energy and power measurements in a compact package. The WattNode enables you to make power and energy measurements from within existing electric service panels avoiding the costly installation of subpanels and associated wiring. The WattNode is designed for use in demand side management (DSM), sub-metering, and energy monitoring applications. The WattNode outputs a stream of pulses whose frequency is proportional to the instantaneous power and whose count is proportional to total watt-hours. Models are available for single-phase, three-phase wye, and three-phase delta configurations for voltages from 120 VAC to 600 VAC at 50 and 60 Hz.

## Multiple Outputs

The standard Pulse WattNode makes bidirectional power measurements (positive and negative power). It can be used for conventional power and energy measurement as well as for net metering and PV applications. The per-phase measurement option (*Option P3*) can be used to measure two or three separate branch circuits with a single three-phase WattNode, saving money and space.

Custom pulse output frequencies are available for special applications.

## Diagnostic LEDs

The Pulse WattNode includes three LEDs—one per phase—for diagnostics. During normal operation, these LEDs flash on and off, with the speed of flashing roughly proportional to the power on each phase. The LEDs flash green for positive power, red for negative power, and yellow for low power factor. Other conditions are signaled with different LED patterns. See **Installation Diagnostics** for full details.

## Current Transformers


The WattNode works with 0.333 VAC toroidal, split-core (opening), and bus-bar current transformers (CTs). Split-core CTs offer greater ease of installation, because they can be installed without disconnecting the circuit being measured. Toroidal CTs are more compact, generally more accurate, and less expensive, but installation requires that the measured circuit be disconnected.

## Pulse Outputs

The WattNode generates pulse outputs using one or more optoisolators (also called photocouplers). These provide 5000V of isolation using an LED and a photo-transistor. This allows the WattNode to be interfaced to monitoring or data logging hardware without concerns about interference, ground loops, shock hazard, etc.

## Front Label

This section describes all the connections, information, and symbols that appear on the WattNode front label.

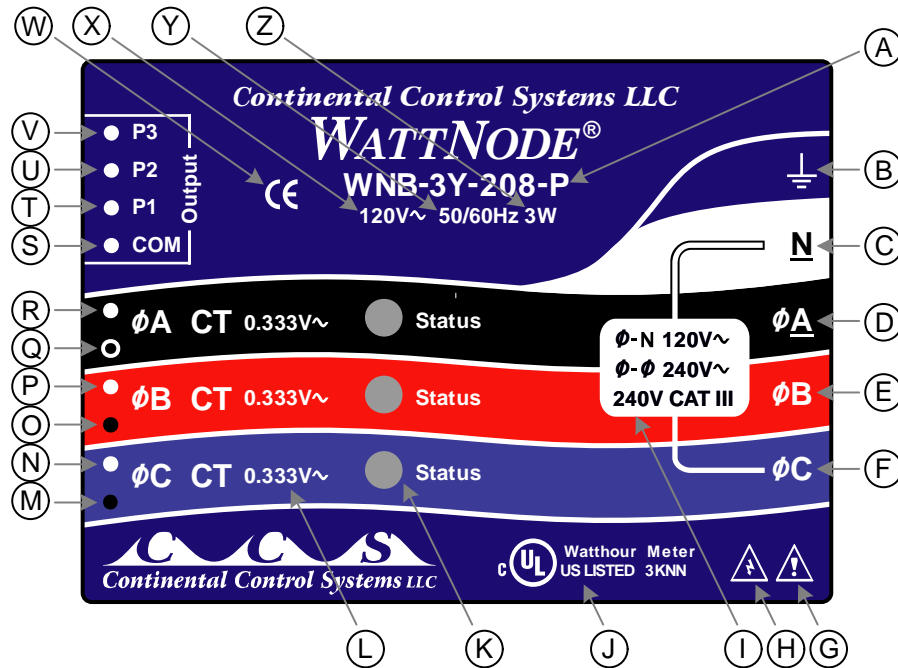

**Figure 1: Front Label Diagram**

**A: WattNode model number.** The “WNB” indicates a second generation WattNode with diagnostic LEDs and up to three pulse output channels. The “3” indicates a three phase model. The “Y” or “D” indicates wye (four-wire) or delta (three-wire) models, although delta WattNodes can measure wye circuits (the difference is in the power supply). The “208” (or other value) indicates the nominal phase-to-phase voltage. Finally, the “P” indicates pulse output.

**B: Functional ground.** This terminal should be connected to earth ground if possible. It is not required for safety grounding, but the accuracy of the WattNode may be reduced if this terminal is not connected.

**C: Neutral.** This terminal should be connected to neutral except when measuring delta circuits (circuits without neutral). On wye WattNode models, the “N” and “∅A” terminals are underlined: the underlined terminals power the WattNode.

**D, E, F: Mains line inputs.** One or more of these terminals are connected to the mains lines. For three phase measurement, the  $\emptyset A$ ,  $\emptyset B$ , and  $\emptyset C$  terminals are used for the three phases. On delta WattNode models, the “ $\emptyset A$ ” and “ $\emptyset B$ ” terminals will be underlined, indicating that the WattNode gets power from the A and B phases.

**G: Attention - consult User’s Guide.** This symbol indicates that there can be danger when installing and operating the WattNode if the installation instructions are not followed correctly.

**H: Caution, risk of electrical shock.** This symbol indicates that there is a risk of electric shock when installing and operating the WattNode if the installation instructions are not followed correctly.

**I: Line voltage measurement ratings.** This block lists the nominal phase-to-neutral ( $\emptyset$ -N 120V~) voltage, phase-to-phase ( $\emptyset$ - $\emptyset$  240V~) voltage, and the rated measurement voltage and category (240V CAT III) for this WattNode model. See the **Specifications** for more information about the measurement voltage and category.

**J: UL Listing mark.** This shows the UL and cUL (Canadian) listing mark and number (3KNN).

**K: Status LEDs.** These are status LEDs used to verify and diagnose WattNode operation. See **Installation Diagnostics** for details.

**L: Current transformer (CT) voltage rating.** These markings (0.333V~) indicate that the WattNode must be used with current transformers that generate a full-scale output of 0.333 VAC (333 millivolts AC).

**M, N, O, P, Q, R: Current transformer (CT) inputs.** These indicate the positions of the screw terminals for the current transformers connections. Note the white and black circles at the left edge of the label: these indicate the color of the CT wire that should be inserted into the corresponding screw terminal.

**S: Pulse output common.** This is the common terminal for all three pulse output channels. This terminal should always be more negative than the P1, P2, and P3 terminals.

**T, U, V: Pulse outputs.** These are the three pulse outputs. Different WattNode models use one, two, or all three of these. These terminals should always be positive, relative to the common terminal.




**W: CE Mark.** This symbol appears on WattNode models that are sold in the European Union and indicates that the WattNode complies with the regulations of the European Union for Product Safety and Electro-Magnetic Compatibility.

**X: Mains supply rated voltage.** This marking indicates the rated supply voltage for this WattNode. The “~” indicates AC voltage. For wye WattNode models, this voltage should appear between the “N” and “ØA” terminals. For delta WattNode models, this voltage should appear between the “ØA” and “ØB” terminals.

**Y: Mains frequencies.** This indicates the rated mains frequencies for the WattNode.

**Z: Maximum rated power.** This indicates the maximum rated power in watts (active power) for this WattNode model.

## Symbols

	Attention - Consult User's Guide	The user must read, understand, and follow all instructions in this User's Guide including all warnings, cautions, and precautions before installing and using the product.
	Caution – Risk of Electrical Shock	Potential Shock Hazard from Dangerous High Voltage.
	CE Marking	Complies with the regulations of the European Union for Product Safety and Electro-Magnetic Compatibility.  Low Voltage Directive - EN 61010-1: 2001 EMC Directive – EN 61327: 1997 + A1/1998 + A2/2001

# Installation



## DANGER — HIGH VOLTAGE HAZARD

WARNING - THESE INSTALLATION/SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRICAL SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.

## Precautions

Only qualified personnel or electricians should install the WattNode. Different models of the WattNode measure circuits with voltages from 120 VAC single-phase to 600 VAC three-phase. **These voltages are lethal!** Always adhere to the following checklist:

- 1) CCS recommends that a **licensed electrician** install the WattNode.
- 2) CCS recommends that the WattNode be installed either in an electrical enclosure (panel or junction box) or in a limited access electrical room.
- 3) Verify that circuit voltages and currents are within the proper range for the WattNode model.
- 4) Use only UL recognized current transformers (CTs) with built-in burden resistors, that generate 0.333 VAC (333 millivolts AC) at rated current. **Do not** use current output CTs such as 1 amp or 5 amp output models! See **Table 9: Split-core CTs** and **Table 10: Toroidal CTs** for the maximum input current ratings.
- 5) Ensure that the line voltage inputs to the WattNode have either fuses or circuit breakers on each voltage phase (not needed for the neutral wire). See **Circuit Protection** below for details.
- 6) Equipment must be disconnected from the HAZARDOUS LIVE voltage before access.
- 7) The terminal block screws are **not** insulated. Do not contact metal tools to the screw terminals if the circuit is live!
- 8) Do not place more than one line voltage wire in a screw terminal; use wire nuts instead. You may use more than one CT wire per screw terminal.
- 9) Before turning on power to the WattNode, ensure that all the wires are securely installed by tugging on each wire.
- 10) Do not install the WattNode where it may be exposed to temperatures below  $-30^{\circ}\text{C}$  or above  $55^{\circ}\text{C}$ , excessive moisture, dust, salt spray, or other contamination. The WattNode requires an environment no worse than pollution degree 2 (normally only non-conductive pollution; occasionally, a temporary conductivity caused by condensation must be expected).
- 11) Do not drill mounting holes using the WattNode as a guide; the drill chuck can damage the WattNode housing or screw terminals.
- 12) If the WattNode is installed incorrectly, the safety protections may be impaired.

## Electrical Service Types

Below is a list of service types, with connections and recommended WattNode models. Note: the WattNode ground connection improves measurement accuracy, but is not required for safety.

Model	Type	Phase to Neutral VAC	Phase to Phase VAC	Electrical Service Types
WNB-3Y-208-P	Wye	120	208-240	1 Phase 2 Wire 120V with neutral 1 Phase 3 Wire 120V/240V 3 Phase 4 Wire 120V/208V
WNB-3Y-400-P	Wye	230	400	1 Phase 2 Wire 230V with neutral 3 Phase 4 Wire 230V/400V
WNB-3Y-480-P	Wye	277	480	3 Phase 4 Wire 277V/480V
WNB-3Y-600-P	Wye	347	600	3 Phase 4 Wire 347V/600V
WNB-3D-240-P	Delta (or Wye)	120-140	208-240	1 Phase 2 Wire 208V (No neutral) 1 Phase 2 Wire 240V (No neutral) 1 Phase 3 Wire 120V/240V 3 Phase 3 Wire 208V (No neutral) 3 Phase 4 Wire 120V/208V
WNB-3D-400-P	Delta (or Wye)	230	400	3 Phase 3 Wire 400V (No neutral) 3 Phase 4 Wire 230V/400V
WNB-3D-480-P	Delta (or Wye)	277	480	3 Phase 3 Wire 480V (No neutral) 3 Phase 4 Wire 277V/480V

Table 1: WattNode Models

### Single-Phase Two-Wire with Neutral

This configuration is most often seen in homes and offices. The two wires are neutral and line. For these models, the WattNode is powered from the neutral and phase A terminals.

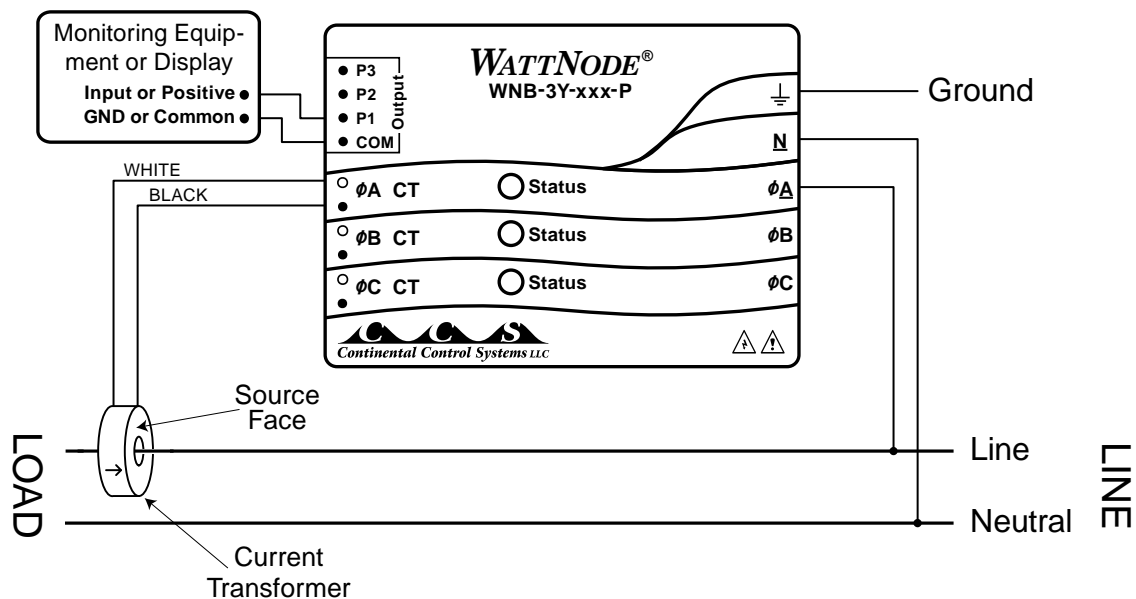


Figure 2: Single-Phase Two-Wire Connection

### Recommended WattNode Models

The following table shows the WattNode models that should be used, depending on the line to neutral voltage.

Line to Neutral Voltage	WattNode Model
120 VAC	WNB-3Y-208-P
230 VAC	WNB-3Y-400-P

### Single-Phase Three-Wire

This configuration is seen in residential and commercial service with 240 VAC for large appliances. The three wires are neutral and two line voltage wires with AC waveforms 180° out of phase; this results in 120 VAC between either line wire (phase) and neutral, and 240 VAC (or sometimes 208 VAC) between the two line wires (phases).

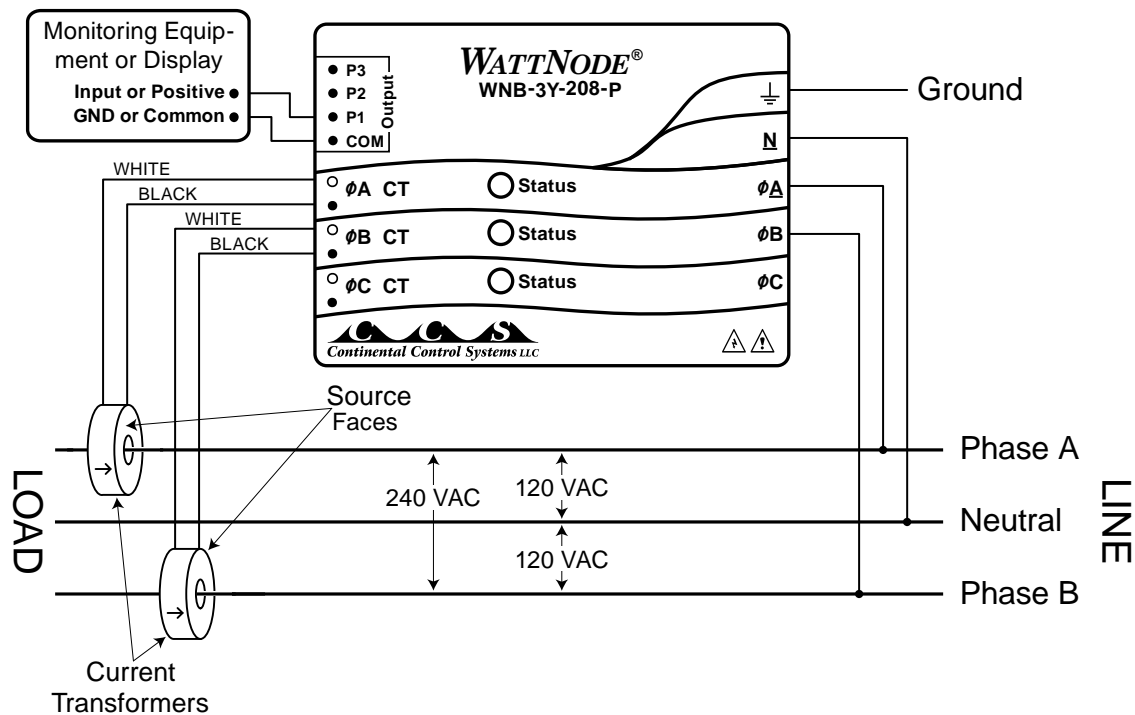


Figure 3: One-Phase Three-Wire Connection


### Recommended WattNode Models

The following table shows the WattNode models that can be used. If neutral may or may not be present, you should use the WNB-3D-240-P (see **Single-Phase Two-Wire without Neutral** below), since this model does not require neutral. If phase B may not be present, you should use the WNB-3Y-208-P (see **Single-Phase Two-Wire with Neutral** above).

WattNode Power Source	WattNode Model
Neutral and Phase A	WNB-3Y-208-P
Phase A and Phase B	WNB-3D-240-P

## Single-Phase Two-Wire without Neutral

This is seen in residential and commercial service with 240 VAC for large appliances. The two wires are two line voltage wires with AC waveforms 180° out of phase. Neutral is not used. This results in 240 VAC (or sometimes 208 VAC) between the two line wires (phases). For this configuration, the WattNode is powered from the phase A and phase B terminals.

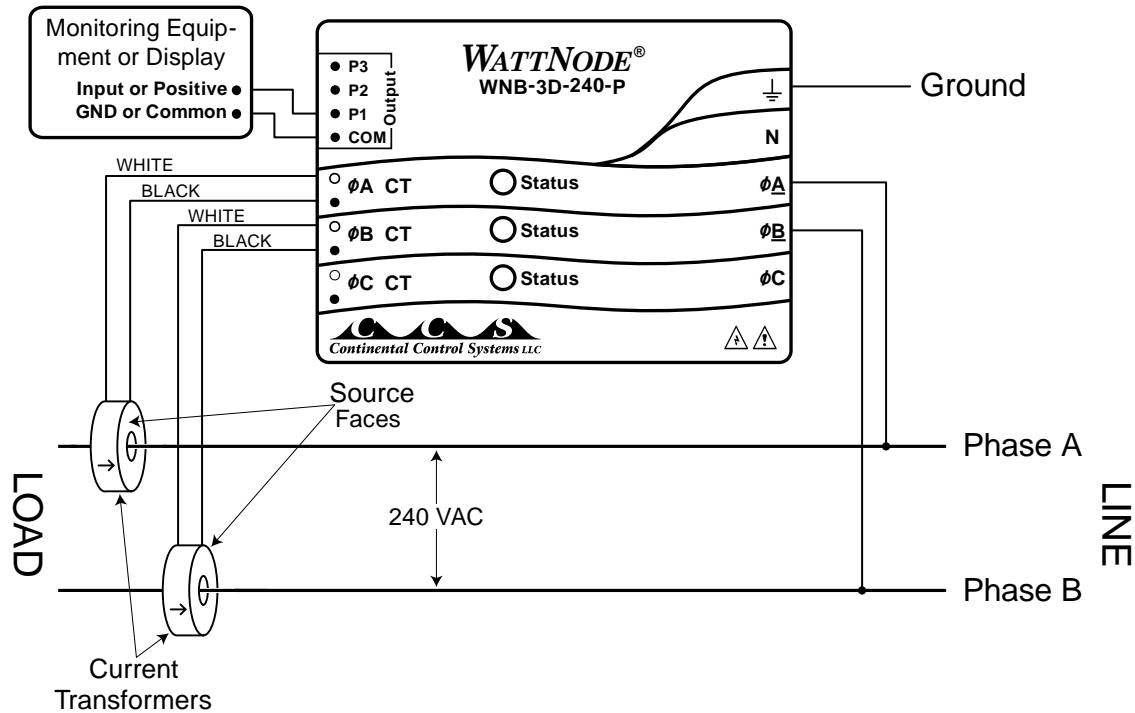

**Figure 4: One-Phase Two-Wire without Neutral Connection**

### Recommended WattNode Model

This configuration is normally measured with one WattNode model.

Phase-to-Phase Voltage	WattNode Model
208 - 240 VAC	WNB-3D-240-P

However, if neutral is available, then you may also use the WNB-3Y-208-P model. You will need to hook up the WattNode as shown in section **Figure 3: One-Phase Three-Wire Connection**. Even though neutral is not used by the load, it must be connected to the WattNode. You will need two CTs.

### Grounded Leg

In rare cases (non-residential), one of the lines (phase A or phase B) may be grounded. You can check for this by using a multimeter (DMM) to measure the voltage between each phase and ground. If you see a reading between 0 and 5VAC, that leg is probably grounded.

The WattNode will correctly measure circuits with a grounded leg, but the status LED will not light for whichever phase is grounded, because the voltage is near zero. If you have a grounded leg configuration, you can save money by removing the CT for the grounded phase, since all the power will be measured on the non-grounded phase. We recommend putting the grounded leg on the **Phase B** input and attaching a note to the WattNode indicating this configuration for future reference.

## Three-Phase Four-Wire Wye

This is typically seen in commercial and industrial environments. The wires are neutral and three power lines with AC waveforms shifted 120° between the successive phases. With this configuration, the line voltage wires may be connected to the phase A, B and C terminals in any order, **so long as the CTs are connected to matching phases**. It is important, however, that you connect the neutral line correctly. For these models, the WattNode is powered from the neutral and phase A terminals.

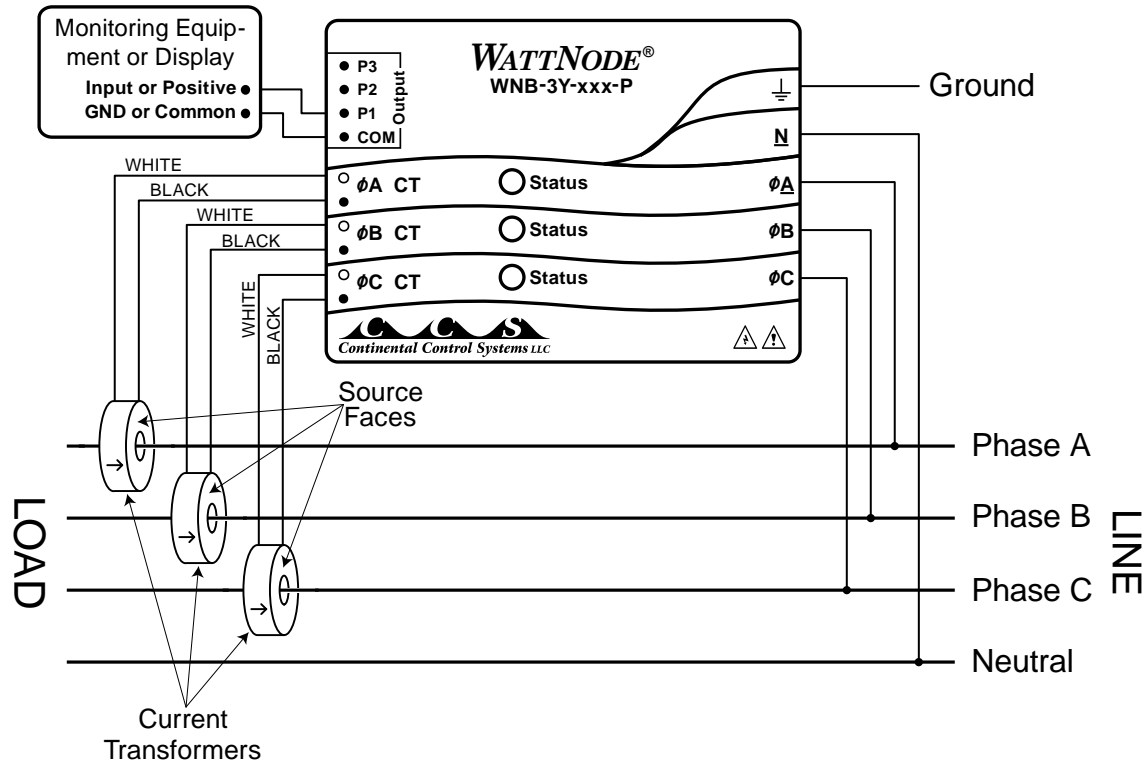


Figure 5: Three-Phase Four-Wire Wye Connection

### Recommended WattNode Models

The following table shows the WattNode models that should be used, depending on the line to neutral voltage and line to line voltage (also called phase to phase voltage).

Line to Neutral Voltage	Line to Line Voltage	WattNode Model
120 VAC	208 VAC	WNB-3Y-208-P
230 VAC	400 VAC	WNB-3Y-400-P
277 VAC	480 VAC	WNB-3Y-480-P
347 VAC	600 VAC	WNB-3Y-600-P

Note: you may also use the following delta WattNode models to measure Three-Phase Four-Wire Wye circuits. The only difference is that delta WattNode models are powered from phase A and phase B, rather than neutral and phase A.

Line to Neutral Voltage	Line to Line Voltage	WattNode Model
120 - 140 VAC	208 - 240 VAC	WNB-3D-240-P
230 VAC	400 VAC	WNB-3D-400-P
277 VAC	480 VAC	WNB-3D-480-P




to power the WattNode. If you have a grounded leg configuration, you can save money by removing the CT for the grounded phase, since all the power will be measured on the non-grounded phases. We recommend putting the grounded leg on the **Phase C** input and attaching a note to the WattNode indicating this configuration for future reference.

## Mounting

Protect the WattNode from moisture, direct sunlight, high temperatures, and conductive pollution (salt spray, metal dust, etc.) If moisture or conductive pollution may be present, use a NEMA rated enclosure to protect the WattNode. Due to its exposed screw terminals, the WattNode must be installed in an electrical service panel, a junction box, or an electrical closet. The WattNode may be installed in any orientation, directly to a wall of an electrical panel or junction box.

The WattNode has two mounting holes spaced 5" (127 mm) apart (center to center). These mounting holes are normally obscured by the detachable screw terminals. Remove the screw terminals by pulling outward while rocking from end to end. The WattNode or **Figure 7** may be used as a template to mark mounting hole positions, but **do not drill the holes with the WattNode in the mounting position** because the drill bit or chuck may damage the WattNode housing or connectors.

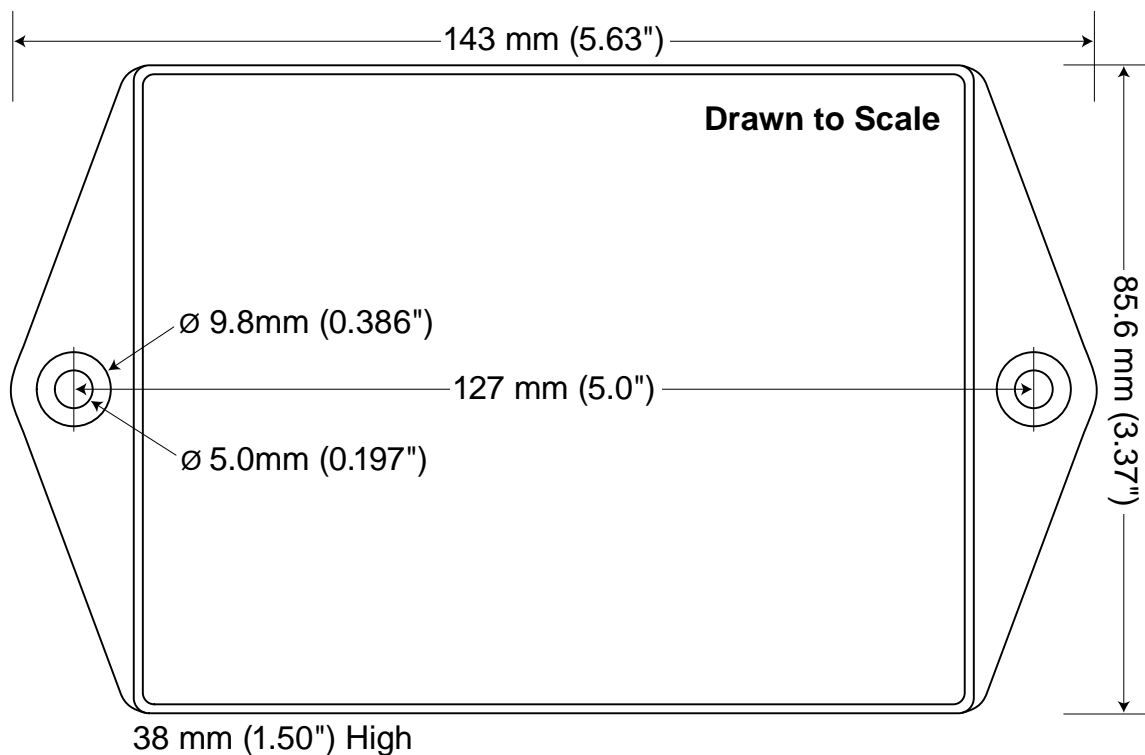

**Figure 7: WattNode Dimensions**

We recommend self tapping (sheet metal) screws in the following sizes (**bold** are preferred). These sizes are from the Unified Thread Standard (UTS) system used in the United States and Canada.

- Pan Head: #6 (use washer), **#8**, #10
- Round Head: #6 (use washer), **#8**, #10
- Truss Head: **#6**, #8
- Hex Washer Head (integrated washer): #6, **#8**
- Hex Head (use washer): #6, **#8**, #10

To protect the WattNode's case, use washers if the screws could pull through the mounting holes. Don't over-tighten the screws, because long term stress on the case can cause cracking.

## Selecting Current Transformers

The rated current of the CTs should normally be chosen at or above the maximum current of the circuit being measured. However, if the circuit will normally operate at some fraction of the maximum current and greatest accuracy is desired at the normal operating power levels, then CTs rated somewhat above the normal operating current may be a better choice. Take care that the maximum allowable current for the CT can not be exceeded without tripping a circuit breaker or fuse (see **Specifications - Current Transformers**). The WattNode accurately measures up to 120% of rated current. Above 120% of rated current, the accuracy will degrade.

CTs can measure lower currents than they were designed for by passing the wire through the CT more than once. For example, to measure currents up to 1 amp with a 5 amp CT, loop the wire through the CT five times. The CT is now effectively a 1 amp CT instead of a 5 amp CT. The effective current rating of the CT is the labeled rating divided by the number of times that the wire passes through the CT.

## Connecting Current Transformers

- Use only UL recognized current transformers (CTs) with built-in burden resistors that generate 0.333 VAC (333 millivolts AC) at rated current. See **Table 9: Split-core CTs** and **Table 10: Toroidal CTs** for the maximum input current ratings.
- **Do not** use current output CTs such as 1 amp or 5 amp output models: they will destroy the WattNode and present a shock hazard!
- Find the arrow or label “THIS SIDE TOWARD SOURCE” on the CT and face toward the current source: generally the circuit breaker. If CTs are mounted backwards or with their white and black wires reversed the measured power will be negative. The WattNode indicates negative phase power with flashing red LEDs.
- To prevent magnetic interference, the CTs on different phases should be separated by at least 1 inch (25 mm). Also, the line voltage conductors for each phase should be separated by at least 1 inch (25 mm) from each other and from neutral.
- To minimize current measurement noise, avoid extending the CT wires, especially in noisy environments. If it is necessary to extend the wires, use stranded twisted pair wire 22 - 14 AWG, rated for 600V.
- You may shorten the CT wires.

To connect CTs, pass the wire to be measured through the CT and connect the CT to the WattNode. **Always remove power before disconnecting any live wires.** Put the line wires through the CTs as shown in the section **Electrical Service Types**. You may measure generated power by treating the generator as the source.

Toroidal CTs require that the wire be disconnected before passing it through the opening in the CT.

Split-core CTs can be opened for installation around a wire by pulling the removable section straight away from the rest of the CT; this may require a strong pull. The removable section only fits one way, so match up the steel core pieces when closing the CT. If the CT seems to jam and will not close, the steel core pieces are probably not aligned correctly; **DO NOT FORCE** together. Instead, reposition or rock the removable portion until the CT closes without excessive force. A nylon cable tie can be secured around the CT to prevent inadvertent opening.

Next, connect the CTs to the WattNode. Route the twisted black and white wires from the CT to the WattNode. Any excess length may be trimmed from the wires if desired. Strip or trim the wires to expose 1/4” (6 mm) of bare wire. The current transformers connect to the six position black screw terminal block. Connect each CT with the white wire aligned with the white dot on the label, and the black wire aligned with the black dot. Note the order in which the phases are connected, as the voltage phases **must** match the current phases for accurate power measurement.

Finally record the CT rated current as part of the installation record for each WattNode. If the wires being measured are passed through the CT(s) more than once, then the recorded rated CT current is divided by the number of times that the wire passes through the CT.

## Circuit Protection

The WattNode is considered permanently connected equipment, because it does not use a conventional power cord that can be easily unplugged. **Permanently connected equipment must have overcurrent protection and be installed with a means to disconnect the equipment.** A switch, disconnect, or circuit breaker may be used to disconnect the WattNode. If a switch or disconnect is used, then there must also be a fuse or circuit breaker of appropriate rating protecting the WattNode.

The WattNode only draws 10-30 milliamps, so the rating of any switches, disconnects, fuses, and/or circuit breakers is determined primarily by the wire gauge used, the mains voltage, and the current interrupting rating required.

- The switch, disconnect, or circuit breaker used to disconnect the WattNode must be as close as practicable to the WattNode.
- CCS recommends using circuit breakers or fuses rated for between 0.5 amps and 20 amps and rated for the mains voltages being measured.
- The overcurrent protection device (circuit breakers or fuses) must protect the ungrounded supply conductors (the mains terminals labeled “ØA”, “ØB”, and “ØC”). If neutral is protected by the overcurrent protection device, then the overcurrent protection device must interrupt both neutral and the ungrounded conductors simultaneously.
- Any switches or disconnects should have at least a 1 amp rating and must be rated for the mains voltages being measured.
- The circuit protection / disconnect system must meet IEC 60947-1 and IEC 60947-3, as well as all national and local electrical codes.
- The line voltage connections should be made with wire rated for use in a service panel or junction box with a voltage rating sufficient for the highest voltage present. CCS recommends 14 or 12 AWG stranded wire, type MTW, THWN, or THHN, 600V. Solid wire may be used, but must be routed carefully to avoid putting excessive stress on the pluggable screw terminal.
- The WattNode has an earth connection, which should be connected for maximum accuracy. However, this earth connection is not used for safety (protective) earthing.


## Connecting Voltage Terminals

**Always disconnect power**—by shutting off circuit breaker(s) or removing fuse(s)—before connecting the voltage lines to the WattNode. Connect each WattNode voltage input to the appropriate phase; also connect ground and neutral (if applicable). If there are multiple circuit breaker on a phase, then the WattNode can be connected to any of the circuit breakers, since the voltages will all be the same (unless one trips). When installing multiple WattNodes at the same site, it may be easier to provide separate circuit breaker(s) for the WattNodes.

When connecting the WattNode, do not place more than one voltage wire in a screw terminal; use separate wire nuts or terminal blocks if needed. The screw terminals handle wire up to 12 AWG. Prepare the voltage wires by stripping the wires to expose 1/4” (6 mm) of bare wire. Connect each voltage line to the green terminal block as shown in the section **Electrical Service Types**. Verify that the voltage line phases match the CT phases. After the voltage lines have been connected, make sure both terminal blocks are securely installed on the WattNode.

If there is any doubt that the voltage rating of the WattNode is correct for the circuit being measured, then before applying power to the WattNode, disconnect the green screw terminal from the WattNode and then turn on the power. Use a voltmeter to measure the voltages (touch the screw heads) and verify that they match the values in the white box on the label.

When power is first applied to the WattNode, check that the LEDs behave normally: if you see the LEDs flashing red-green-red-green, then disconnect the power immediately! This indicates the line voltage is too high for the WattNode.

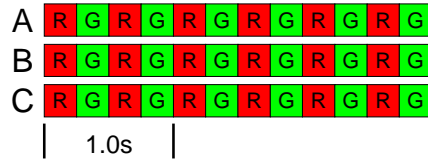


**Figure 8: WattNode LED Overvoltage Warning**

The WattNode is powered from the voltage inputs: phase A “ $\text{ØA}$ ” to neutral “N”, or phase A “ $\text{ØA}$ ” to phase B “ $\text{ØB}$ ” for delta models. If the WattNode is not receiving at least 85% of the nominal line voltage, it may stop measuring power. Since the WattNode consumes a small amount of power itself, you may wish to power the WattNode from a separate circuit or place the current transformers downstream of the WattNode, so that the power from the WattNode is not measured.

## Connecting Pulse Outputs

- The outputs P1, P2, and P3 should never be connected to negative voltages, or to voltages greater than +60 VDC.
- The recommended maximum current through the optoisolators is 5mA, although they will generally switch 8-10mA. If you need to switch higher currents, contact us about *Option SSR* (solid-state relay).
- The outputs are completely isolated from all dangerous voltages, so you can connect them at any time.
- Since the output wiring is near line voltage wiring, use wires or cables rated for the highest voltage present, generally 300V or 600V rated wire.
- If this cable will be in the presence of bare conductors, such as bus-bars, it should be double insulated or jacketed.
- When wiring over long distances, use shielded twisted-pair cable to prevent interference. If you use shielded wiring, connect the shield only at one end.

The WattNode’s pulse outputs are the collector and emitter of an optoisolator transistor (also called a photo-coupler) controlled by the WattNode’s pulse stream. These outputs may be connected to most data monitoring devices that expect a contact closure or relay input: data loggers, energy management systems, etc. The following schematic illustrates connecting pull-up resistors on all three optoisolator outputs with a pull-up voltage of 5V.

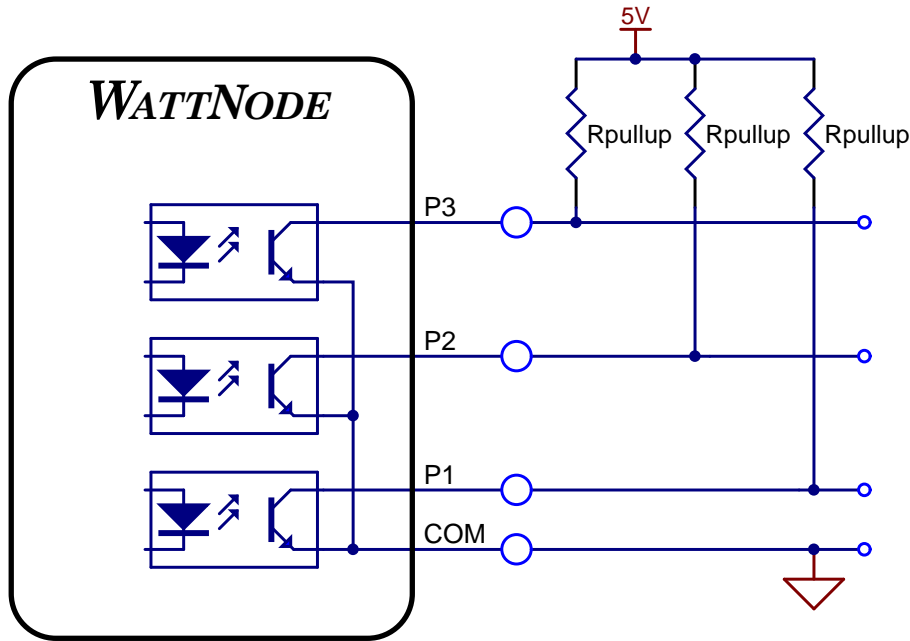

**Figure 9: Optoisolator Outputs**

The WattNode can have from one to three pulse output channels. All three output channels share the common or ground connection. Each output channel has its own positive output connection, labeled P1, P2, and P3 (tied to the transistor collectors).

### Output Assignments

The following table shows the pulse output channel assignments for the standard bidirectional outputs and for the optional per-phase outputs (*Option P3*).

WattNode Outputs	P1 Output	P2 Output	P3 Output
Bidirectional Outputs	Positive real energy (all phases)	Negative real energy (all phases)	Not used
Per-Phase Outputs ( <i>Option P3</i> )	Phase A positive real energy	Phase B positive real energy	Phase C positive real energy

**Table 2: Pulse Output Assignments**

### Pull-Up Resistor Selection

For standard WattNodes with the normal 4 Hz full-scale frequency, pull-up resistor values between 4.7k $\Omega$  and 100k $\Omega$  will work well. You can use values of 1.0M $\Omega$  or higher to reduce power consumption for battery powered monitoring equipment.

The following table lists recommended maximum pull-up resistor values (in ohms, kilo-ohms, and mega-ohms) to use with the WattNode pulse output(s), particularly if you have ordered a WattNode with a pulse frequency different than 4 Hz. These values typically result in a pulse waveform rise time (defined as the time for the voltage to rise from 20% to 80% of the pull-up voltage) of less than 10% of the total pulse period. The fall time is roughly constant in the 2 to 10 microsecond range.

The exact resistor values are not critical. Generally, resistor values as low as the **Minimum Pull-up Resistance** (bottom row of table) and up to twice the recommended value should work. Lower resistance will result in faster switching and increase the current flow. If your frequency isn't in the table, use the next higher frequency or interpolate between two values.

Full-Scale Pulse Frequency (Hz)	Pull-up to 3.0V	Pull-up to 5.0V	Pull-up to 12V	Pull-up to 24V
1	4.7MΩ	5.6MΩ	7.5MΩ	9.1MΩ
4	1.2MΩ	1.6MΩ	2.2MΩ	3.0MΩ
10	470kΩ	620kΩ	910kΩ	1.3MΩ
50	91kΩ	130kΩ	200kΩ	270kΩ
100	47kΩ	62kΩ	100kΩ	130kΩ
150	30kΩ	43kΩ	62kΩ	91kΩ
200	24kΩ	33kΩ	47kΩ	68kΩ
400	12kΩ	16kΩ	24kΩ	33kΩ
600	8.2kΩ	12kΩ	16kΩ	22kΩ
Minimum Pull-up Resistance	600Ω	1.0 kΩ	2.4kΩ	4.7kΩ

**Table 3: Recommended Pulse Output Pull-up Resistors**

When the optoisolator is on (conducting), there will be a small voltage drop between the common and output terminals, typically 0.1 - 0.4 volts, called the saturation voltage. This voltage depends on the current flowing through the optoisolator (see **Specifications - Optoisolator Outputs** below for details). To compute the current flowing through the optoisolator, use the following approximate equation:

$$I_{opto} = V_{pullup} / R_{pullup}$$

## Installation Summary

- 1) Mount the WattNode.
- 2) Turn off power before installing toroidal CTs or making voltage connections.
- 3) Mount the CTs around the line wires being measured. Take care to orient the CTs facing the source.
- 4) Connect the twisted white and black wires from the CT to the black terminal block on the WattNode, matching the wire colors to the white and black dots on the label of the WattNode.
- 5) Connect the voltage wires to the green terminal block of the WattNode, and double check that the current measurement phases match the voltage measurement phases.
- 6) Connect the output terminals of the WattNode to the monitoring equipment.
- 7) Apply power to the WattNode.
- 8) Verify that the LEDs light correctly and don't indicate an error condition.

## Installation Diagnostics

The Pulse WattNode includes a multi-color LED for each phase to help verify correct operation and diagnose incorrect installation. The LEDs are marked "Status" on the label. The following diagrams and descriptions explain the various LED patterns and their meanings. The A, B, and C on the left side indicate the phase of the LEDs. Values like "1.0s" and "3.0s" indicate the time the LEDs are lit in seconds. In the diagrams, sometimes the colors are abbreviated: R = red, G = green, Grn = green, Y = yellow.


### Normal Startup

On initial power-up, the LEDs will all light up in a red, yellow, green sequence. During this sequence, the WattNode pulse output(s) are operating normally and can generate pulses. After this startup sequence, the LEDs will show the status, such as **Normal Operation** below.

A	Red	Yellow	Green
B	Red	Yellow	Green
C	Red	Yellow	Green
	1.0s	1.0s	1.0s

## Normal Operation

During normal operation, when positive power is measured on a phase, the LED for that phase will flash green, as shown for phase A above. The LEDs do NOT flash at the same rate as the pulse output(s). The rate of flashing ranges from 5 Hz (five flashes per second) at full power down to 0.5 Hz (one flash every two seconds) at 1% of full power. The rate stays at one flash every two seconds until the power is too low to measure.

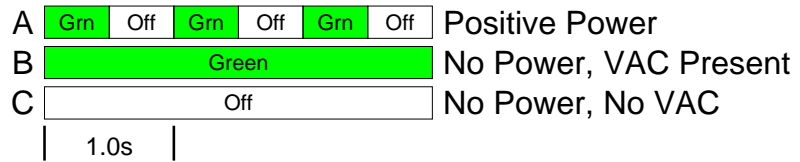

Below the minimum power that the WattNode can measure (see **Specifications - Measurement - Creep Limit**) as long as line VAC is present, the WattNode will display solid green, as shown for phase B above. If the WattNode detects no power and no line voltage, it will completely turn off the LED, as shown for phase C above.

## Negative Power

If one or more of the phase LEDs are flashing red, it indicates negative power on those phases. This can happen for the following reasons:

 


- This is a bidirectional power measurement application, such as a photovoltaic system, where negative power is sometimes expected.
- The current transformer (CT) for this phase was installed backwards on the wire. This can be solved by flipping either the CT or swapping the white and black wires where they connect to the WattNode .
- The white and black wires for the CT were reversed where they connect to the WattNode.
- In some cases, this can also occur if the CT wires are connected to the wrong inputs on the WattNode, such as if the CT wires for phases B and C are swapped.

Note: if all three LEDs are flashing red and they always turn on and off together, like the diagram for **Low Line Voltage**, then the WattNode is experiencing an error or low line voltage, not negative power.

## Low Power Factor

The WattNode will display yellow flashing on any phase where the current lags the voltage by 60 degrees or more (power factor  $\leq 0.5$ ), or where the current leads the voltage by 30 degrees or more (power factor  $\leq 0.866$ ). If the power is positive, the LED will flash yellow and off. If the power is negative, the LED will flash yellow and red. These indicate a low power factor, or that the phase angle between the voltage and the current for these phases is unusual. This can happen for a variety of reasons, some of which occur during correct operation.



- Small appliances sometimes have low power factors.
- When monitoring house (or building) power with PV (solar) power generation, the combination of the house load and the PV generated power can result in a net power with a low power factor.
- At very light loads, some devices and power supplies have low power factors.
- Traditional florescent light ballasts can have power factors as low as 0.4.
- Three-phase delta configurations can result in low power factors, especially if one of the phases is grounded.

- The CTs are not installed on the correct line phases. For example, if you connect phases A, B and C to the respective VAC inputs on the WattNode, but then the CTs for A, B, and C are connected in the wrong order to the WattNode, say B, A, C, then the power measured on phases A and B will have an extra 120 degree phase shift between voltage and current, resulting in a low power factor and probably negative power.

In general, if you see yellow or yellow/red flashing for one or more phases check the following:

- Check that your load is turned on (since standby power supplies can have low power factors).
- Check that the CT phases match the phases for the VAC connections.
- Check that none of the CTs are installed backwards on the current carrying wire and that the white and black CT leads are installed in the correct screw terminals on the WattNode (the black wire should match up to the black circle on the label and the white wire should match up to the white circle on the label).
- Consider whether your load may have an unusual power factor. Loads like heaters, incandescent lights, and power factor corrected loads should have a power factor near 1.0 and should not cause the LEDs to flash yellow. Loads like motors, florescent light ballasts, etc. may have low power factors, in which case, yellow flashing may be normal.

### Erratic Flashing

If the LEDs are flashing slowly and erratically, sometimes green, sometimes red or yellow, this generally indicates one of the following:

- Earth ground is not connected to the WattNode (the top connection on the green screw terminal).
- Voltage is connected for a phase, but the current transformer is not connected, or the CT has a loose connection.
- In some cases, particularly for a circuit with no load, this may be due to electrical noise. This is not harmful and can generally be disregarded, provided that you are not seeing output pulses when there should be no power. Try turning on the load to see if the erratic flashing stops.

To fix this, try the following:

- Make sure earth ground is connected.
- If there are unused current transformer inputs, install a shorting jumper for each unused CT (a short length of wire connected between the white and black dots marked on the label).
- If there are unused voltage inputs, connect them to neutral (if present) or earth ground (if neutral isn't available).
- If you suspect noise may be the problem, try moving the WattNode away from the source of noise. Also try to keep the CT wires to be as short as possible and cut off excess wire.

### WattNode Not Operating

It should not be possible for all three LEDs to stay off when the WattNode is powered, because the phase powering the WattNode will have line voltage present. Therefore, if all LEDs are off, the WattNode is either not receiving sufficient line voltage to operate, or is malfunctioning and needs to be returned for service. Verify that the voltage on the VAC screw terminals is within  $\pm 20\%$  of the nominal operating voltages printed in the white rectangle on the front label.

A	Off	Grn	Off	Red	Off	
B	R	Off	Yellow	Off	Red	
C	Grn	Off	Red	Grn	Red	Off

A	Off
B	Off
C	Off

### WattNode Error

If the WattNode experiences an internal error, it will light all LEDs red for three seconds. If you see this happen repeatedly, return the WattNode for service.

### Bad Calibration

This indicates that the WattNode has detected bad calibration data and must be returned for service.

### Line Voltage Too High





Whenever the WattNode detects line voltages over 125% of normal for one or more phase(s), it will display a fast red/green flashing for the affected phases. This is harmless if it occurs due a momentary surge, but if the line voltage is high continuously, **the power supply may fail. If you see continuous over-voltage flashing, disconnect the WattNode immediately!** Check that the WattNode model and voltage rating is correct for the circuit.

### Bad Line Frequency

If the WattNode detects a power line frequency below 45 Hz or above 70 Hz, it will light all the LEDs yellow for at least three seconds. The LEDs will stay yellow until the line frequency returns to normal. During this time, the WattNode should continue to accurately measure power and generate output pulses. This can occur in the presence of extremely high noise, such as if the WattNode is too close to an unfiltered variable frequency drive.

### Low Line Voltage

These LED patterns occur if the line voltage is too low for the WattNode to operate correctly. During the normal startup sequence, the power supply voltage drops and the WattNode restarts. Verify that the voltage on the VAC screw terminals is no lower than 15% below the nominal operating voltages printed in the white rectangle on the front label. If the voltages are in the normal range and the WattNode continues to display one of these patterns, return the WattNode for service.

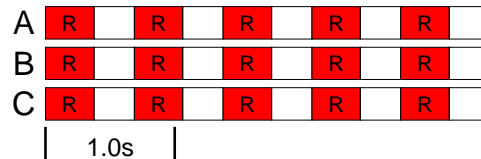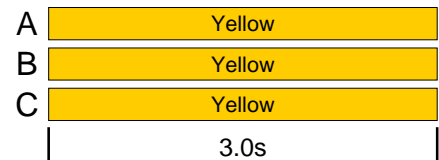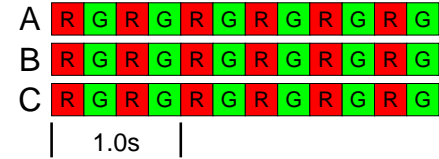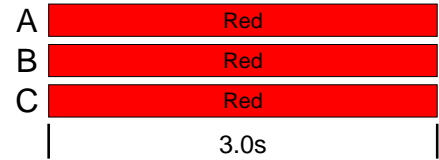

## Troubleshooting

If the WattNode does not appear to be operating correctly or generating expected pulses. Start by checking the diagnostic LEDs as described in the previous section **Installation Diagnostics**. Then double check the installation instructions. If there are still problems, check the following.

**SYMPTOM:** The WattNode is not generating any pulses.

- Make sure the load is turned on.
- If the LEDs are flashing green, then the WattNode is measuring positive power and should be generating pulses, so there may be something wrong with the pulse output connection or you may need a pull-up resistor (see **Connecting Pulse Outputs**).

- If the LEDs on one or more phases are flashing red or yellow/red, then the total power may not be positive, in which case the WattNode won't generate positive pulses. If you have a bidirectional WattNode, you can check for negative energy pulses on the P2 output. If this is the case, check that the line phases match the CT phases, that all the CTs face the source of power, and that the CT white and black wires are installed correctly at the WattNode.
- If all the LEDs are solid green (or off), then the measured power is below the creep limit (1/1500th of full-scale) and the WattNode will not generate any pulses (see **Specifications - Creep Limit**).
- If the LEDs are flashing green slowly, the power may be very low. A WattNode with a nominal output frequency of 4.00 Hz can have a pulse period of several minutes at very low power levels.
- If all the LEDs are off, then the WattNode either does not have sufficient line voltage to operate, or has malfunctioned. Verify that the voltage on the VAC screw terminals is within -15%, +20% of the nominal operating voltage.

**SYMPTOM:** The WattNode appears to be reporting incorrect power.

This can be caused by any of the following:

- An incorrect estimate of expected power. If possible, try to verify the actual power or current with a handheld power meter or current clamp.
- The CTs are not installed on the correct line phases. Verify that the CT phasing matches the line VAC inputs to the WattNode.
- The measured current exceeds the CT rating. This can saturate CT or the WattNode input circuitry, resulting in lower than expected readings. If possible, use a current clamp to measure the current and make sure it is below the CT rated amps.
- The measured current is too small. Most current transformers are only specified to meet their accuracy from 10% to 100% of rated current. In practice, most CTs work reasonably well down to 1% of rated current. Very low currents may not register properly, resulting in low power or no power reported.
- Interference from a variable frequency or variable speed drive: VFD, VSD, inverter, or the like. Generally, these drives should not interfere with the WattNode, but if they are in very close proximity, or if the CT leads are long, interference can occur. Try moving the WattNode at least one meter (three feet) away from any VFDs. Use short CT leads if possible. **NEVER** install the WattNode downstream of a VFD: the varying line frequency and extreme noise will cause problems!
- In rare cases, the CTs are defective or mislabeled. If possible, use a current clamp to verify the current, then use a DMM (multimeter) to measure the AC voltage between the white and black wires from the CT (leave them connected to the WattNode during this test). At rated current, the CT output voltage should equal 0.333 VAC (333 millivolts AC). At lower currents, the voltage should scale linearly, so at 20% of rated current, the output voltage should be  $0.20 * 0.333 = 0.0666$  VAC (66.6 millivolts AC).
- The WattNode is not functioning correctly: try swapping the WattNode for another unit.

# Operating Instructions

---

## Pulse Outputs

The WattNode generates pulse outputs using one or more optoisolators (also called photocouplers). These provide 5000V of isolation using an LED and a photo-transistor. This allows the WattNode to be interfaced to monitoring or data logging hardware without concerns about interference, ground loops, shock hazard, etc.

Depending on the options selected, the Pulse WattNode can generate full-scale pulse output frequencies ranging from less than 1 Hz to 600 Hz. The standard full-scale output frequency is 4.00 Hz. The standard Pulse WattNode provides two pulse streams for measuring bidirectional power. With *Option P3*, the WattNode provides three pulse streams for independently measuring each phase or three single-phase circuits.

The pulse output(s) from the WattNode are generally square-waves, with equal on and off periods. When the measured power is constant, the pulse frequency is constant and the output is an exact square-wave. If the power is increasing or decreasing, the output waveform will not be a perfect square-wave as the on and off periods are getting longer or shorter.

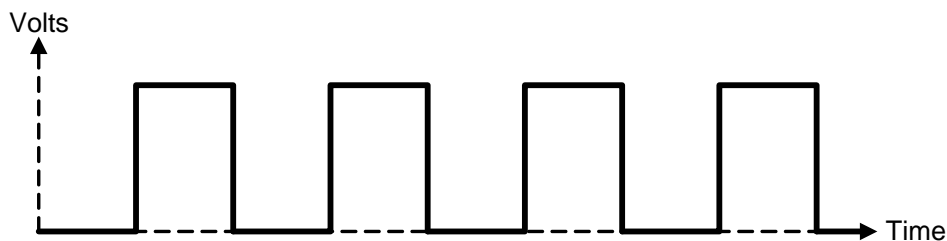


Figure 10: Output Pulses for Steady Power

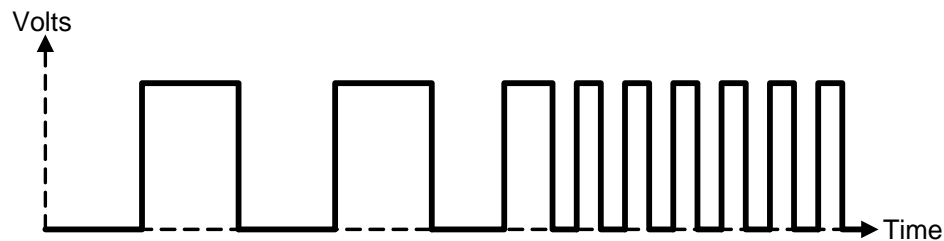


Figure 11: Output Pulses for Increasing Power

See **Connecting Pulse Outputs** (above) and **Specifications - Pulse Outputs** (below) for more information.

## Power and Energy Computation

Every pulse from the WattNode corresponds to a fixed amount of energy. Power (watts) is energy divided by time, which can be measured as pulses per second (or pulses per hour). The following scale factor tables convert from pulses to energy (watt-hours or kilowatt-hours) for different models. Following the tables are equations that can be used to convert from pulses to energy and power for WattNodes with custom full-scale pulse output frequencies.

### Scale Factors - Bidirectional Outputs

The following table provides scale factors for standard bidirectional output WattNode models with a full-scale pulse output frequency of 4.00 Hz. Equations to compute power and energy follow the scale factor tables.

CT Size (amps)	Pulses Per kilowatt-hour (PpKWH)				Watt-hours per pulse (WHpP)			
	3Y-208 3D-240	3Y-400 3D-400	3Y-480 3D-480	3Y-600	3Y-208 3D-240	3Y-400 3D-400	3Y-480 3D-480	3Y-600
5	8000.00	4173.913	3465.70	2766.571	0.125	0.250	0.289	0.361
15	2666.67	1391.304	1155.24	922.190	0.375	0.750	0.866	1.084
30	1333.33	695.652	577.617	461.095	0.750	1.500	1.731	2.169
50	800.000	417.391	346.570	276.657	1.250	2.500	2.885	3.615
60	666.667	347.826	288.809	230.548	1.500	3.000	3.463	4.338
70	571.429	298.137	247.550	197.612	1.750	3.500	4.040	5.060
100	400.000	208.696	173.285	138.329	2.500	5.000	5.771	7.229
150	266.667	139.130	115.523	92.219	3.750	7.500	8.656	10.844
200	200.000	104.348	86.643	69.164	5.000	10.000	11.542	14.458
250	160.000	83.478	69.314	55.331	6.250	12.500	14.427	18.073
300	133.333	69.565	57.762	46.110	7.500	15.000	17.313	21.688
400	100.000	52.174	43.321	34.582	10.000	20.000	23.083	28.917
600	66.667	34.783	28.881	23.055	15.000	30.000	34.625	43.375
800	50.000	26.087	21.661	17.291	20.000	40.000	46.167	57.833
1000	40.000	20.870	17.329	13.833	25.000	50.000	57.708	72.292
1200	33.333	17.391	14.440	11.527	30.000	60.000	69.250	86.750
1500	26.667	13.913	11.552	9.222	37.500	75.000	86.563	108.438
2000	20.000	10.435	8.664	6.916	50.000	100.00	115.42	144.583
3000	13.333	6.957	5.776	4.611	75.000	150.00	173.13	216.875
any	$\frac{40,000}{CTsize}$	$\frac{20,870}{CTsize}$	$\frac{17,329}{CTsize}$	$\frac{13,833}{CTsize}$	$\frac{CTsize}{40}$	$\frac{CTsize}{20.87}$	$\frac{CTsize}{17.329}$	$\frac{CTsize}{13.833}$

**Table 4: Scale Factors - Bidirectional Outputs**

## Scale Factors - Per-Phase Outputs

The following table provides scale factors for per-phase output WattNode models (*Option P3*) with a full-scale pulse output frequencies of 4.00 Hz for each phase.

**WARNING: Only use this table if your WattNode has Option P3 (Per-Phase Outputs)!**

CT Size (amps)	Pulses Per kilowatt-hour (PpKWH)				Watt-hours per pulse (WHpP)			
	3Y-208 3D-240	3Y-400 3D-400	3Y-480 3D-480	3Y-600	3Y-208 3D-240	3Y-400 3D-400	3Y-480 3D-480	3Y-600
5	24000.0	12521.7	10397.1	8299.71	0.042	0.080	0.096	0.120
15	8000.00	4173.91	3465.70	2766.57	0.125	0.240	0.289	0.361
30	4000.00	2086.96	1732.85	1383.29	0.250	0.479	0.577	0.723
50	2400.00	1252.17	1039.71	829.971	0.417	0.799	0.962	1.205
60	2000.00	1043.48	866.426	691.643	0.500	0.958	1.154	1.446
70	1714.29	894.410	742.651	592.837	0.583	1.118	1.347	1.687
100	1200.00	626.087	519.856	414.986	0.833	1.597	1.924	2.410
150	800.000	417.391	346.570	276.657	1.250	2.396	2.885	3.615
200	600.000	313.043	259.928	207.493	1.667	3.194	3.847	4.819
250	480.000	250.435	207.942	165.994	2.083	3.993	4.809	6.024
300	400.000	208.696	173.285	138.329	2.500	4.792	5.771	7.229
400	300.000	156.522	129.964	103.746	3.333	6.389	7.694	9.639
600	200.000	104.348	86.643	69.164	5.000	9.583	11.542	14.458
800	150.000	78.261	64.982	51.873	6.667	12.778	15.389	19.278
1000	120.000	62.609	51.986	41.499	8.333	15.972	19.236	24.097
1200	100.000	52.174	43.321	34.582	10.000	19.167	23.083	28.917
1500	80.000	41.739	34.657	27.666	12.500	23.958	28.854	36.146
2000	60.000	31.304	25.993	20.749	16.667	31.944	38.472	48.194
3000	40.000	20.870	17.329	13.833	25.000	47.917	57.708	72.292
any	$\frac{120,000}{CTsize}$	$\frac{62,609}{CTsize}$	$\frac{51,986}{CTsize}$	$\frac{41,499}{CTsize}$	$\frac{CTsize}{120.0}$	$\frac{CTsize}{62.609}$	$\frac{CTsize}{51.986}$	$\frac{CTsize}{41.499}$

**Table 5: Scale Factors - Per-Phase Outputs (*Option P3*)**

## Scale Factor Equations

Using the “Watt-hours per pulse” **WHpP** value from the table above for your WattNode model and current transformer, you can compute energy and power as follows:

- **PulseCount** - This is the count of pulses, used to compute energy. You can use the count of pulses over specified periods of time (like a month) to measure the energy for that period of time.
- **PulseFreq** - This is the measured pulse frequency (Hertz) out of the WattNode. This can also be computed by counting the number of pulses in a fixed period of time and then dividing by the number of seconds in that time period. For example, if you count 720 pulses in five minutes (300 seconds), then  $PulseFreq = 720 / 300 = 2.40$  Hz.

$$Energy \text{ (watt-hours)} = WHpP \cdot PulseCount$$

$$Power \text{ (watts)} = WHpP \cdot 3600 \cdot PulseFreq$$

To convert these values to kilowatt-hours and kilowatts, divide by 1000.

Using the “Pulses Per kilowatt-hour” **PpKWH** value from the table above for your WattNode model and current transformer, you can compute energy and power as follows (multiply by 1000 to convert kilowatts to watts):

$$\text{Energy (kilowatt-hours)} = \text{PulseCount} / \text{PpKWH}$$

$$\text{Power (kilowatts)} = 3600 \cdot \text{PulseFreq} / \text{PpKWH}$$

## Power and Energy Equations

The following description explains how to compute power and energy from the pulse output stream of a WattNode for any full-scale pulse output frequency. The power is proportional to the pulse frequency, while the energy is proportional to the count of pulses.

For these calculations, we use the following variables:

- **VAC** - This is the nominal line voltage (phase to neutral) of the WattNode model. For delta WattNodes, this is a virtual voltage, since there may not be a neutral connection. Note: this is **not** the actual measured voltage.
- **PpPO** - “Phases per Pulse Output”. This is the number of WattNode voltage phases associated with a pulse output channel. **PpPO** equals 3 for all models except the Per-Phase Output models, where it equals 1, since these have one phase per pulse output channel.
- **CTamps** - This is the current transformer (CT) rated amps. Note: If the wires being measured are passed through the CT(s) more than once, then **CTamps** is the rated CT current divided by the number of times that the wire passes through the CT.
- **FSHz** - This is the full-scale pulse frequency printed on the back label of the WattNode. It is generally 4.00 Hz.
- **PulseCount** - This is the count of pulses, used to compute energy. You can use the count of pulses over specified periods of time (like a month) to measure the energy for that period of time.
- **PulseFreq** - This is the measured pulse frequency out of the WattNode. This can also be computed by counting the number of pulses in a fixed period of time and then dividing by the number of seconds in that time period. For example, if you count 720 pulses in five minutes (300 seconds), then  $\text{PulseFreq} = 720 / 300 = 2.40 \text{ Hz}$ .

The values of the constant parameters are in the following table.

WattNode Models	VAC	PpPO	Standard FSHz Values
WNB-3Y-208-P	120	3 or 1*	4.000 Hz
WNB-3Y-400-P	230	3 or 1*	4.000 Hz
WNB-3Y-480-P	277	3 or 1*	4.000 Hz
WNB-3Y-600-P	347	3 or 1*	4.000 Hz
WNB-3D-240-P	120**	3 or 1*	4.000 Hz
WNB-3D-400-P	230**	3 or 1*	4.000 Hz
WNB-3D-480-P	277**	3 or 1*	4.000 Hz

**Table 6: Power and Energy Parameters**

\*Note: **PpPO** is 1 for WattNodes with the **Per-Phase Outputs (Option P3)**, 3 for all other models.

\*\*Note: these are “virtual” phase-to-neutral voltages used for delta model power and energy computations.

## Full-Scale Power Equation

The following equation computes the nominal full-scale power associated with a pulse output. For bidirectional output WattNode models, this is the full-scale power for all phases together. For per-phase output WattNodes, this is the full-scale power for a single phase. Note: use **VAC** value from **Table 6: Power and Energy Parameters** above.

$$\text{Full-Scale Power}(W) = VAC \cdot PpPO \cdot CTamps$$

## Power Equation

The following equation computes the power associated with a pulse output. The **PulseFreq** value may be measured or averaged over different time periods to compute the average power (also called demand). Note: use **VAC** value from **Table 6** above.

$$\text{Power}(W) = \frac{VAC \cdot PpPO \cdot CTamps \cdot \text{PulseFreq}}{FSHz}$$

## Energy Equation

The following equation computes the energy (watt-hours) associated with a pulse output channel. By using the **PulseCount** for different periods of time (day, week, month, etc.), you can measure the energy over different time periods. You can convert this to kilowatt-hours by dividing by 1000. The 3600 term in the denominator converts from watt-seconds to watt-hours. Note: use **VAC** value from **Table 6** above.

$$\text{Energy}(WH) = \frac{VAC \cdot PpPO \cdot CTamps \cdot \text{PulseCount}}{FSHz \cdot 3600}$$

## Watt-Hours per Pulse per CT Rated Amp

There is an alternate way of computing the energy reported by a WattNode using the variable **WHpPpA** (watt-hours per pulse per CT rated amp). If you multiply the **WHpPpA** by the amp rating of your CTs, the result will be the watt-hours measured each time the WattNode generates a pulse. The **WHpPpA** value is printed on the back label of your WattNode for convenience.

$$\text{EnergyPerPulse}(WH) = WHpPpA \cdot CTamps$$

For example: a WNB-3Y-208-P with a full-scale pulse frequency of 4.00 Hz has a **WHpPpA** value of 0.0250 printed on the back label. With 15 amp CTs, it will output one pulse for every 0.375 watt-hours.

$$(0.025) \cdot (15.0 \text{ amps}) = 0.375 \text{ watt-hours}$$

It is easy to use the **WHpPpA** value to compute energy:

$$\text{Energy}(WH) = WHpPpA \cdot CTamps \cdot \text{PulseCount}$$

If you don't have access to the back label of the WattNode, you can compute **WHpPpA** as follows:

$$WHpPpA = \frac{PpPO \cdot VAC}{FSHz \cdot 3600}$$

The standard *WHpPpA* values are listed in the following table. These only apply for WattNodes with a 4.00 Hz full-scale pulse frequency.

WattNode Models	Watt-Hours per Pulse per CT Rated Amp (FSHz = 4.00)	
	Bidirectional Outputs	Per-Phase Outputs
WNB-3Y-208-P	0.02500	0.008333
WNB-3Y-400-P	0.04792	0.01597
WNB-3Y-480-P	0.05771	0.01924
WNB-3Y-600-P	0.07229	0.02410
WNB-3D-240-P	0.02500	0.008333
WNB-3D-400-P	0.04792	0.01597
WNB-3D-480-P	0.05771	0.01924

**Table 7: Watt-Hours per Pulse per CT Rated Amp**

## Maintenance and Repair

The WattNode requires no maintenance. It contains no user serviceable or replaceable parts. There are no fuses or batteries in the WattNode. There are no specific tests that can be performed by the user, other than verifying correct operation with the status LEDs and pulse outputs.

The WattNode should not normally need to be cleaned, but if cleaning is desired, power must be disconnected first and a dry cloth or brush should be used.

The WattNode is not user serviceable. In the event of any failure, the WattNode must be returned for service. In the case of a new installation, follow the instructions in sections **Installation Diagnostics** and **Troubleshooting** before returning the WattNode for service, to ensure that the problem is not connection related.

## Specifications

### Models

Model	Nominal VAC phase to neutral	Nominal VAC phase to phase	Phases	Wires
WNB-3Y-208-P	120	208–240	3	4
WNB-3Y-400-P	230	400	3	4
WNB-3Y-480-P	277	480	3	4
WNB-3Y-600-P	347	600	3	4
WNB-3D-240-P	120–140*	208–240	3	3–4
WNB-3D-400-P	230*	400	3	3–4
WNB-3D-480-P	277*	480	3	3–4

**Table 8: WattNode Models**

\*Note: the delta models have an optional neutral connection that may be used for measuring wye circuits. The delta WattNode models use the phase A and phase B connections to power the WattNode.

Any of these models are available with the following three output options:

- **Bidirectional Outputs** - (*this is the standard model*) This model has two pulse output streams. P1 generates pulses in proportion to the total real positive energy, while P2 generates pulses in proportion to the total real negative energy. The P1 output for this model behaves identically to the P1 output of the **Single Output** model. The individual phase energies are all added together every 200ms. If the result is positive, it is accumulated for the P1 output, while if it is negative, it is accumulated for the P2 output. If one phase has negative power (-100W), while the other two phases have positive power (+100W each), the

negative phase will subtract from the positive phases, resulting in a net of 100W, causing pulses on P1, but no pulses on P2. There will only be pulses on P2 if the sum of all three phases is negative.

- **Per-Phase Outputs** - (*Option P3*) This model has three pulse streams: P1, P2, and P3. Each pulse stream generates pulses in proportion to the real positive energy measured on one phase (phases A, B, and C respectively).

WattNodes are available with custom full-scale pulse output frequencies ranging from 0.01 Hz to 600 Hz (the upper limit is 150 Hz for the **Per-Phase Outputs** option). For custom frequencies, specify “*Option nnnHz*”, where “*nnn*” is the desired full-scale frequency. Depending on quantity, custom pulse frequency models may be priced differently and have additional lead-time.

## Current Transformers

The WattNode uses CTs with built-in burden resistors generating 0.333 VAC at rated current. The maximum input current rating is dependent on the CT frame size (see the tables below). Exceeding the maximum input current rating may damage CTs.

The WattNode should only be used with UL recognized current transformers, which are available from Continental Control Systems. Using non-approved transformers will invalidate the WattNode’s UL listing. The following Continental Control Systems part numbers are UL recognized under UL file number E96927 with model designations starting with CTS or CTT, with the suffix “N” at the end of CTT models.

**Split-core CTs:** CTS-0750-xxx, CTS-1250-xxx, CTS-2000-xxx, where xxx indicates the full scale current rating between 0005 and 1500 amps.

**Toroidal CTs:** CTT-0750-100N, CTT-1250-400N, CTT-0300-030N, CTT-0500-060N, CTT-1000-200N, CTT-0300-005N, CTT-0300-015N, CTT-0500-050N, CTT-0500-030N, CTT-0500-015N, CTT-0750-070N, CTT-0750-050N, CTT-0750-030N, CTT-1000-150N, CTT-1000-100N, CTT-1000-070N, CTT-1000-050N, CTT-1250-300N, CTT-1250-250N, CTT-1250-200N, CTT-1250-150N, CTT-1250-100N, CTT-1250-070N.

The accuracy and phase angle of the split-core CTs are specified from 10% to 130% of rated current. Some low current split-core CTs have unspecified phase angle errors. The following tables show the available split-core CTs. The CT suffix (-xxx) is the rated current.

Model	Inside Diameter	Rated Amps	Accuracy / Phase Angle	Maximum Amps
CTS-0750-xxx	0.75” (19.0mm)	5, 15, 20, 30, 50	±1% / not spec.	200
CTS-0750-xxx	0.75” (19.0mm)	70, 100, 150	±1% / <2°	200
CTS-1250-xxx	1.25” (31.7mm)	70, 100	±1% / not spec.	600
CTS-1250-xxx	1.25” (31.7mm)	150, 200, 250, 300, 400, 600	±1% / <2°	600
CTS-2000-xxx	2.00” (50.8mm)	600, 800, 1000, 1200, 1500	±1% / <2°	1500

**Table 9: Split-core CTs**

The accuracy of the toroidal CTs is specified from 10% to 130% of rated current. The phase angle error is specified at 50% of rated current. The following tables show the available toroidal CTs. The CT suffix (-xxx) is the rated current. The “N” at the end of the part number indicates a nickel core material, which is the only core material available for our toroidal CTs.

Model	Inside Diameter	Rated Amps	Accuracy / Phase Angle	Maximum Amps
CTT-0300-xxxN	0.30” (7.6mm)	5, 15, 20, 30	±1% / <1°	30
CTT-0500-xxxN	0.50” (12.7mm)	15, 20, 30, 50, 60	±1% / <1°	60
CTT-0750-xxxN	0.75” (19.0mm)	30, 50, 70, 100	±1% / <1°	100
CTT-1000-xxxN	1.00” (25.4mm)	50, 70, 100, 150, 200	±1% / <1°	200
CTT-1250-xxxN	1.25” (31.7mm)	70, 100, 150, 200, 250, 300, 400	±1% / <1°	400

**Table 10: Toroidal CTs**

## Measurement

**Creep Limit:** 0.067% (1/1500th) of full-scale. Whenever the apparent power (a combination of the real and reactive power values) for a phase drops below the creep limit, the output power (real) for the phase will be forced to zero. Also, if the line voltage for a phase drops below 20% of nominal VAC, the output power for the phase will be forced to zero. These limits prevent spurious pulses due to measurement noise.

**Update Rate:** ~200 milliseconds. Internally, the consumed energy is measured at this rate and used to update the pulse output rate.

**Current Transformer Phase Angle Correction:** 1.0 degrees. Current transformers (CTs) typically have a phase angle error ranging from 0.5 degrees to 2.0 degrees. The WattNode is normally programmed with a phase angle correction of 1.0 degrees to provide good accuracy with typical CTs. Contact the factory for other phase angle correction values.

**Over-Voltage Limit:** 125% of nominal VAC. If the line voltage for one or more phases exceeds this limit, the status LEDs for these phases will flash alternating red-green as a warning. Extended over-voltage operation can damage the WattNode and void the warranty. See

**Line Voltage Too High** in the **Installation Diagnostics** section.

## Accuracy

The following accuracy specifications do not include errors caused by the current transformers.

### **Condition 1 - Normal Operation**

**Line voltage:** 80% - 115% of nominal

**Power factor:** 1.0

**Frequency:** 48 - 62 Hz

**Ambient Temperature:** 25°C

**Current:** 5% - 100% of rated current

**Accuracy:** ±0.5% of reading

### **Condition 2 - Low Current**

All conditions the same as Condition 1 except:

**Current:** 1% - 5% of rated current

**Accuracy:** ±1.0% of reading

### **Condition 3 – Very Low Current**

All conditions the same as Condition 1 except:

**Current:** 0.2% - 1% of rated current

**Accuracy:**  $\pm 3.0\%$  of reading

### **Condition 4 - High Current**

All conditions the same as Condition 1 except:

**Current:** 100% - 120% of rated current

**Accuracy:**  $\pm 1.0\%$  of reading

### **Condition 5 - Low Power Factor**

All conditions the same as Condition 1 except:

**Power factor:** 0.5 ( $\pm 60$  degree phase shift between current and voltage)

**Additional Error:**  $\pm 0.5\%$  of reading

### **Condition 6 - Temperature Variation**

All conditions the same as Condition 1 except:

**Ambient Temperature:**  $-30^{\circ}\text{C}$  to  $+55^{\circ}\text{C}$

**Accuracy:**  $\pm 0.5\%$  of reading

## **Pulse Outputs**

### **Factory Programmable Full-Scale Pulse Frequencies:**

**Standard (All Models):** 4.00 Hz

**Custom (Bidirectional Output Models):** 0.01 Hz to 600 Hz

**Custom (Per-Phase Output Models – Option P3):** 0.01 Hz to 150 Hz

### **Absolute Maximum Pulse Output Frequencies:**

**Bidirectional Output Models:** 900 Hz

**Per-Phase Outputs (Option P3):** 200 Hz

**Start-Up Time:** approximately 500 milliseconds. The WattNode starts measuring power and generating pulses 500 milliseconds after AC voltage is applied.

### **Optoisolator Outputs:**

**Isolation:** 5000 VAC RMS

**Breakdown Voltage (collector–emitter):** 60 V (exceeding this may destroy the outputs)

**Maximum Reverse Voltage (emitter–collector):** 5V (exceeding this may destroy the outputs)

**Max Dark (Off) Current (collector–emitter):** 100nA

**Recommended Load Current (collector–emitter):** 1 $\mu$ A (microamp) to 5mA (milliamp)


**Maximum Load (collector–emitter) Current:** ~8 mA

**Output Waveform:** square-wave, 50% duty cycle

**Output Waveform Rise Time (microseconds):** approximately  $R_{pullup} / 100$ , where  $R_{pullup}$  is the pull-up resistor value (in ohms) and the pull-up voltage is 5V. Rise time is defined as the time for the output voltage to rise from 20% to 80% of the pull-up voltage.

**Output Waveform Fall Time:** approximately 2-3 microseconds with a 5V pull-up voltage.

**Saturation Voltage vs. Load Current:** this is the typical voltage (at room temperature) measured between the “COM” terminal and “P1”, “P2”, or “P3” when the optoisolator is on (conducting). Ideally, this voltage would be zero, but instead, it varies with the load current.

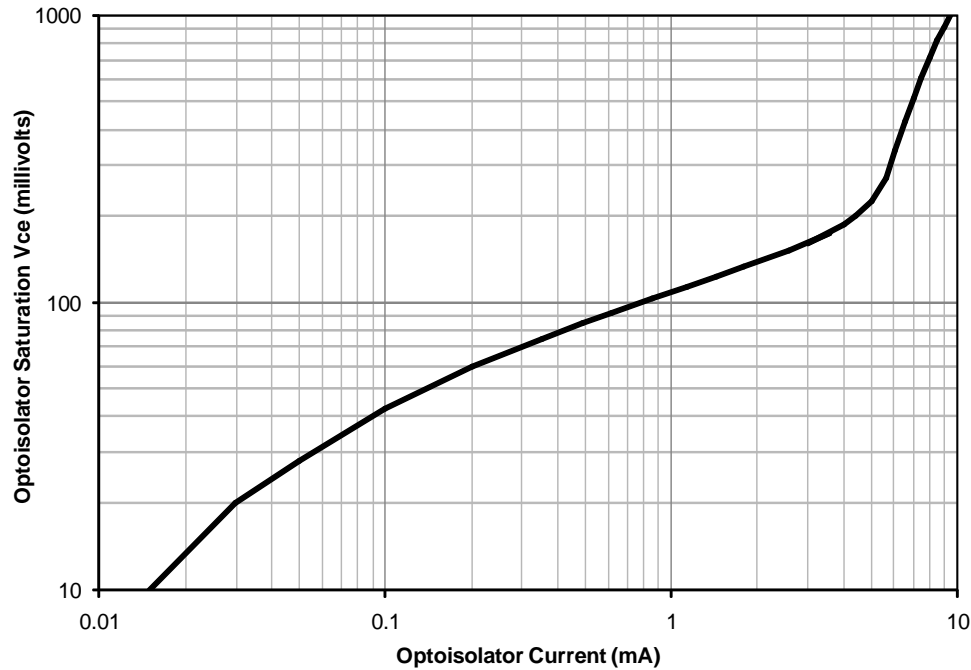

**Figure 12: Optoisolator Saturation Voltage vs. Load Current**

## Electrical

**Power Consumption:** The following power consumption values are with all three phases powered. The WattNode’s power supply draws most of the total power consumed, while the measurement circuitry draws 1-5% of the total (6-32 milliwatts per phase, depending on the model). Due to the design of the power supply, the WattNode will draw more power at 50Hz.

Model	Active Power at Nominal VAC, 60Hz	Active Power at Nominal VAC, 50Hz	Typical Power Factor	Rated Power*
WNB-3Y-208-P	1.6W	1.8W	0.75	3W
WNB-3Y-400-P	1.6W	1.8W	0.64	3W
WNB-3Y-480-P	2.1W	2.4W	0.63	4W
WNB-3Y-600-P	1.2W	1.2W	0.47	3W
WNB-3D-240-P	1.7W	1.9W	0.63	4W
WNB-3D-400-P	1.4W	1.5W	0.47	3W
WNB-3D-480-P	1.8W	2.2W	0.53	4W

**Table 11: WattNode Power Consumption**

*\*Note: This is the maximum rated power at 115% of nominal VAC at 50Hz. This is the same as the rated power that appears on the front label of the WattNode.*

**Maximum Operating Voltage Range:** -20% to +15% of nominal

**Operating Frequencies:** 50/60 Hz

**Measurement Category:** CAT III

Measurement category III is for measurements performed in the building installation. Examples are measurements on distribution boards, circuit-breakers, wiring, including cables, bus-bars, junction

boxes, switches, socket-outlets in the fixed installation, and equipment for industrial use and some other equipment, for example, stationary motors with permanent connection to the fixed installation.

The line voltage measurement terminals on the WattNode are rated for the following CAT III voltages (these ratings also appear on the WattNode front label):

Model	CAT III Voltage Rating
WNB-3Y-208-P, WNB-3D-240-P	240 VAC
WNB-3Y-400-P, WNB-3D-400-P	400 VAC
WNB-3Y-480-P, WNB-3D-480-P	480 VAC
WNB-3Y-600-P	600 VAC

**Table 12: WattNode CAT III Ratings**

#### **Current Transformer Inputs:**

**Nominal Input Voltage:** 0.333 VAC RMS

**Absolute Maximum Input Voltage:** 2.0 VAC RMS

**Input Impedance at 50/60 Hz:** 23k $\Omega$

**Maximum CT Wire Length:** 2.4m (8 feet)

#### **Certifications**

**Safety:** UL 61010-1; CAN/CSA-C22.2 No. 61010-1-04; IEC 61010-1

**Emissions:** FCC Part 15, Class B; EN 55022: 1994, Class B

**Immunity:** EN 61326: 2002 (Industrial Locations)

**Electrostatic Discharge:** EN 61000-4-2: (B) Self-Recovering

**Radiated RF Immunity:** EN 61000-4-3: (A) No Degradation

**Electrical Fast Transient / Burst:** EN 61000-4-4: (B) Self-Recovering

**Surge Immunity:** EN 61000-4-5: (B) Self-Recovering

**Conducted RF Immunity:** EN 61000-4-6: (A) No Degradation

**Voltage Dips, Interrupts:** EN 61000-4-11: (B) Self-Recovering

#### **Environmental**

**Operating Temperature:** -30°C to +55°C (-22°F to 131°F)

**Altitude:** Up to 2000 m (6560 ft)

**Operating Humidity:** 5 to 90% relative humidity (RH) up to 40°C, decreasing linearly to 50% RH at 55°C.

**Pollution:** POLLUTION DEGREE 2 - Normally only non-conductive pollution; occasionally, a temporary conductivity caused by condensation must be expected.

**Indoor Use:** Suitable for indoor use.

**Outdoor Use:** Suitable for outdoor use when mounted inside an electrical enclosure (Hammond Mfg., Type EJ Series) that is rated NEMA 3R or 4.

## Mechanical

**Enclosure:** High impact, ABS plastic

**Flame Resistance Rating:** 94V-0, IEC FV-0

**Size:** 143mm × 85mm × 38mm (5.63" × 3.34" × 1.5")

**Weight:** 295gm (10.4oz)

**Connectors:** Euroblock style pluggable terminal blocks

**Green:** 22 to 12 AWG (1.0mm - 3.2mm), 600 V

**Black:** 22 to 12 AWG (1.0mm - 3.2mm), 300 V

## Warranty

---

All products sold by Continental Control Systems, LLC (CCS) are guaranteed against defects in material and workmanship for a period of three years from date of shipment. CCS's responsibility is limited to repair, replacement, or refund, any of which may be selected by CCS at its sole discretion. CCS reserves the right to substitute functionally equivalent new or serviceable used parts.

This warranty covers only defects arising under normal use and does not include malfunctions or failures resulting from: misuse, neglect, improper application, improper installation, acts of nature, lightning, or repairs by anyone other than CCS.

Except as set forth herein, CCS makes no warranties, expressed or implied, and CCS disclaims and negates all other warranties, including without limitation, implied warranties of merchantability and fitness for a particular purpose. Some states or jurisdictions do not allow limitations on implied warranties, so these limitations may not apply to you.

In no event shall CCS be liable for any indirect, special, incidental, or consequential damages. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.